

DESCALE PA1178

DESCALE PA1178 will remove scale from dishwashers, coffee urns, glass and hard surfaces. It is a moderately acidic compound.

PHYSICAL AND CHEMICAL PROPERTIES:

Appearance:	White powder with a low odour
pH (1% solution):	2 - 3
Solubility:	Readily water soluble
Foaming:	Medium to low

DIRECTIONS FOR USE:

Dishwashers

Switch off the detergent feeder or remove the supply hose from the drum of Sabre dishwashing detergent. Drain the dishwasher. Refill and add 500 gm to 1 kilo of **DESCALE PA1178**.

Put the dishwasher on manual and wash till clean. Drain and rinse dishwasher. Put the detergent feeder on or put the supply tube back into the container of Sabre.

Coffee Urns

Add 50 gm of **DESCALER PA1178** per 1 litre of warm water and leave till the scale dissolves.

Windows

Apply a 5% solution of **DESCALER PA1178** in water with a brush or abrasive plastic scourer. Leave for 2 minutes and rinse off.

RINSE ALL FOOD CONTACTING SURFACES WITH POTABLE WATER AFTER USE.

The above are general operating parameters only as subsequent rinsing and treatment will depend on the actual application.